


- Fuse 1: Emergency blinkers light
- Fuse 2: Direction indicators  
Parking lights  
Instrument cluster lights  
Parking light warning light
- Fuse 3: High and low beam  
Front stop light switch  
Voltmeter  
Neutral position warning light  
Generator warning light  
Oil pressure warning light  
Brake fluid warning light
- Fuse 4: Horn solenoid
- Fuse 5: Starting solenoid  
Rear stop light switch

- 1. Headlamp 60/55W
- 2. Bulb. main/dipped beam 4W
- 3. Bulb. front sidelights 4W
- 4. Connector. Molex 4 way
- 5. Horns 21 W
- 6. R/H front direction indicator 21 W
- 7. L/H front direction indicator 21 W
- 8. Clutch engine interlock switch
- 9. Control switch: start/stop engine 4 way
- 10. Connector. Molex 4 way
- 11. Dashboard door
- 12. Bulb. R/H direction indicator warning light 1.2W
- 13. Bulb. L/H direction indicator warning light 1.2W
- 14. Bulb. voltmeter light 3W
- 15. Bulb. tachometer light 3W
- 16. Bulb. speedometer 3W
- 17. Bulb. oil pressure warning light 1.2W
- 18. Bulb. generator warning light 1.2W
- 19. Bulb. neutral warning light 3W
- 20. Bulb. high beam indicator warning light 1.2W

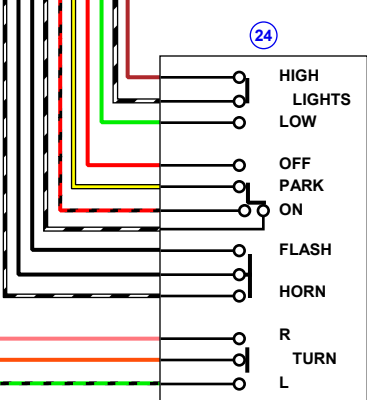

- 21. Bulb. neutral warning light 1.2W
- 22. Commutator of ignition 1.2W
- 23. Connector, LH 12 way
- 24. Control switch: lights, horn, direction indicators
- 25. Generator
- 26. Connector
- 27. Rectifier 15 way
- 28. Voltage regulator
- 29. Contactor
- 30. Connector, RH
- 31. Emergency flasher switch
- 32. Spark plugs
- 33. Ignition coils
- 34. Distributor
- 35. Oil pressure switch
- 36. Neutral switch
- 37. Rear brake stop switch
- 38. Front brake stop switch
- 39. Fuse terminal board
- 40. Fuse terminal board
- 41. Battery 12V/24Ah
- 42. Starter relay
- 43. Starter motor
- 44. flasher
- 45. L/H rear direction indicator 21W
- 46. Taillight
- 47. Taillight connector
- 48. Number plate and stop light bulb
- 49. R/H rear direction indicator 21W